TOPCOM®

Deskmaster 142

KÄYTTÖOHJE

USER GUIDE

DECLARATION OF CONFORMITY

We, TTS Nv, Grauwmeer 17 , 3001 Heverlee , Belgium, declare that our product :

Product name: TOPCOM

Model type: Deskmaster 142

is in conformity with the essential requirements of the R&TTE directive 1999/5/EC and carries the **CE** mark accordingly.

Supplementary information:

The product complies with the requirements of:

Low Voltage Directive 73/23/EEC
EMC Directive 89/336/EEC

Date: 10/01/2001
Place: Heverlee , Belgium
Name: Verheyden Geert
Function: Technical Director

Signature:

European contact: TTS Nv, R&D department, Research Park, Grauwmeer 17, 3001 Heverlee, Belgium. Tel : +32 16 398920 , Fax : +32 16 398939

TOPCOM®
Deskmaster 142

!!Tärkeää!!

Tilaa teleoperaattorilta soittajan numeronäyttöpalvelu.
Ilman tätä tilausta puhelimen numeronäyttö ei toimi.

Pidätämme oikeuden muutoksiin.

!! Important !!

To use 'Caller ID' (display caller), this service has to be activated on your phone line.Normally you need a separate subscription from your telephone company to activate this function.

If you don't have the Caller ID function on your phone line, the incoming telephone numbers will NOT be shown on the display of your telephone.

S	Funktionerna i denna bruksanvisning publiceras med reservation för ändringar.
SF	Tässä ohjekirjassa julkaissut tiedot voivat muuttua ilman ennakkoilmoitusta.
DK	Vi forbeholder os retten til ændringer af de specifikationer, der er beskrevet i denne brugsanvisning.
N	Funksjoner beskrevet i denne manualen kan endres uten nærmere informasjon.
GB	The features described in this manual are published with reservation to modifications.

1 Asennus **6**
2 Näppäimet ja merkkivalot **6**
3 Näyttö ja merkkivalot **7**
3.1 Perusnäyttö *7*
3.2 Merkkivalot *7*
4 Käyttö **8**
4.1 Näyttötekstien kielen valinta *8*
4.2 Päivämäärän ja kellonajan asetus *8*
4.3 Etunumeron asetus *8*
4.4 Puhelimen nollaus *8*
5 Puhelun soittaminen **9**
5.1 Valinnan toisto *9*
5.2 Mikrofonin mykistys *9*
5.3 Soittoäänen voimakkuus *9*
5.4 Katkosnäppäin *9*
5.5 Kuuloke toiminnot(valinnainen *9*
6 Soittajan numeronäyttö **10**
6.1 Yleistä *10*
6.2 Numeronäyttömuisti *10*
6.2.1 Numeroluettelon selaaminen *10*
6.2.2 Numeroiden poistaminen numeronäyttömuistista *11*
6.2.3 Puhelun soittaminen numeronäyttömuistista *11*
6.3 Ilmoitus puheviestistä *11*
6.4 Ilmoitus sähköpostiviestistä *11*
7 Puhelinmuistio **12**
7.1 Aakkosnumeerisen näppäimistön käyttö *12*
7.2 Numeron tallentaminen puhelinmuistioon *13*
7.4 Soittaminen puhelinmuistiossa olevaan numeroon nimeä käyttäen *13*
7.5 Puhelinmuistiossa olevan numeron ja nimen muuttaminen *13*
7.6 Numeron ja nimen poistaminen puhelinmuistiosta *13*
8 Pika- ja lyhytvalintamuistit **14**
8.1 Puhelinnumeron tallentaminen pika- ja lyhytvalintamuistiin *14*
8.2 Puhelinnumeron siirtäminen numeronäyttömuistista pika- tai lyhytvalintamuistiin *14*
8.3 Soittaminen pika- ja lyhytvalintamuistia käyttäen *14*
8.4 Numeron tai nimen muuttaminen pika- ja lyhytvalintamuistissa *14*
8.5 Pika- ja lyhytvalintanumeron poistaminen *15*
9 TAKUU **15**

1 ASENNUS

- Liitä puhelinjohdon toinen pää seinässä olevaan puhelinpistorasiaan ja toinen pää puhelimen pohjassa olevaan liitäntään.
- Asenna paristot, jolloin näyttö aktivoituu.
  - Avaa puhelimen pohjassa oleva paristolokero.
  - Aseta lokeroon 4 kpl 1,5 V AA-paristoja.
  - Sulje lokero.

  Paristojen sijasta voit myös käyttää verkkolaitetta (9 V DC / 300 mA (=-)) (Verkkolaite ei kuulu toimitukseen.)

Huom! *Puhelimessa on haihtumaton muisti, jota sähkökatkot eivät tyhjennä!*

2 NÄPPÄIMET JA MERKKIVALOT

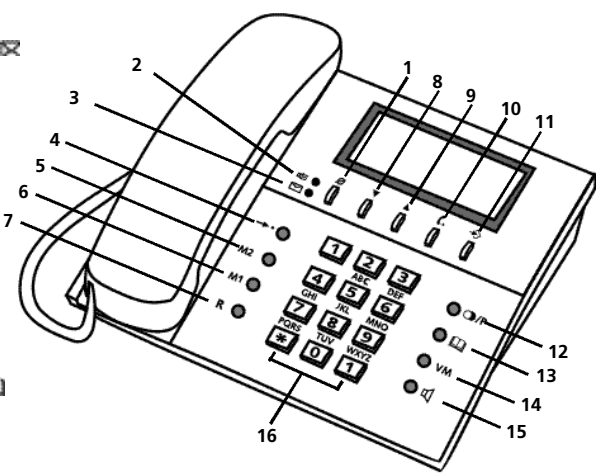

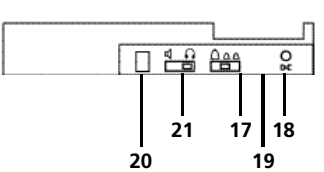

1 Poisto/mykistysnäppäin
2 Handsfree-merkkivalo
3 Uuden puhelun merkkivalo
4 Muistinäppäin
5 Pikavalintanäppäin 2 M2
6 Pikavalintanäppäin 1 M1
7 Katkosnäppäin R
8 Nuolinäppäin ALAS
9 Nuolinäppäin YLÖS
10 Soittonäppäin
11 Ohjelmointinäppäin
12 Uudelleenvalinta/tauko
13 Puhelinmuistion näppäin
14 Puhepostinäppäin **VM**
15 Kaiutintoiminnon näppäin (handsfree)
16 Numero- ja kirjainnäpäimet
17 Soittoäänen voimakkuuden säädin
18 Verkkolaitteen liitäntä
19 Puhelinlinjan liitäntä
20 Kuulokeliitäntä (valinnainen)
21 Kuuloke/Handsfree toiminta kytkin (valinnainen)

3 NÄYTTÖ JA MERKKIVALOT

3.1 Perusnäyttö

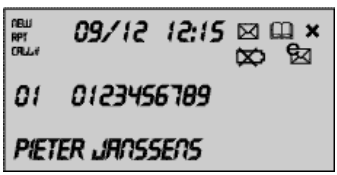

Näyttö	Merkitys
12:15	Kellonaika (24 tunnin muodossa).
09/12	Päivämäärä (päivä/kuukausi).
	Ilmoitus uudesta puheviestistä teleoperaattorin vastaajapalvelussa .
0123456789	Soittajan puhelinnumero.
PIETER JANSSENS	Soittajan nimi.
NEW	Uusi puhelu soittoluettelossa.
02	Soiton järjestysnumero, jos sen ohellä näkyy CALL#.
	Numerosta soitettujen puheluiden lukumäärä, jos ruudussa näkyy RPT.
	Paristovaroitus.
	Puhelinmuistion symboli.
	Ilmoitus uudesta sähköpostiviestistä.

3.2 Merkkivalot

Merkkivalo	Merkitys
	Kaiutinpuhelu (handsfree) tai puoli-handsfree
	Vilkkuu kerran = uusi soitto soitto-luettelossa
	Vilkkuu kaksi kertaa = uusi puheviesti vastaajapalvelussa

4 KÄYTTÖ

4.1 Näyttötekstien kielen valinta

Kieli valitaan seuraavalla tavalla:

- Paina ALAS-näppäintä 6 sekuntia, jolloin järjestelmän symboli tulee näyttöön.
- Etsi haluamasi kieli nuolinäppäimillä .
- Vahvista asetus ohjelmointinäppäimellä , jolloin siirryt seuraavaan asetukseen (4.2 Päivämäärän ja kellonajan asetus) tai sulje valikko painamalla puhelinmuistionäppäintä .

4.2 Päivämäärän ja kellonajan asetus

Jos käytät teleoperaattorin numeronäyttöpalvelua, johon sisältyy soittajan puhelinnumeron lisäksi päivämäärä ja kellonaika, puhelimen kello päivittyy automaattisesti.
Voit myös asettaa kellon itse seuraavalla tavalla:

- Kielen valinnan jälkeen avautuu kellonasetustila.
- Aseta päivä, kuukausi ja kellonaika (24 tunnin muodossa) numeronäppäimillä.
- Vahvista asetus ohjelmointinäppäimellä , jolloin siirryt seuraavaan asetukseen (4.3 Vaihteenohitusnumeron asetus) tai sulje valikko painamalla puhelinmuistionäppäintä .

4.3 Etunumeron asetus

Kun soitat numeronäyttömuistissa olevaan numeroon, puhelin lisää asettamasi etunumeron puhelinnumeron eteen. Tämä on tarpeen silloin, kun puhelin on vaihteen alaliittymänä ja ulkolinjalle pääsy edellyttää vaihteen ohitusnumeron näppäilyä.

- Päivämäärän ja kellonajan asetuksen jälkeen avautuu vaihteenohitusnumeron ohjelmointitila.
- Aseta ohitusnumero numeronäppäimillä. (Väärin näppäilty numero poistetaan poistonäppäimellä).
- Vahvista asetus ohjelmointinäppäimellä , jolloin siirryt seuraavaan asetukseen (4.4 Puhelimen nollaus) tai sulje valikko painamalla puhelinmuistionäppäintä .

4.4 Puhelimen nollaus

Puhelin on mahdollista palauttaa alkutilaansa eli nollata se. Nollauksessa kaikki tallennetut tiedot häviävät muistista.

- Vaihteenohitusnumeron asetuksen jälkeen avautuu nollaustila.
- Suorita nollaus painamalla poistonäppäintä tai sulje valikko puhelinmuistionäppäimellä .

Varoitus: Puhelimen nollaus hävittää kaikki muistiin tallennetut numerot ja soittajien numeroluettelon.

5 PUHELUN SOITTAMINEN

Puhelu voidaan soittaa kahdella tavalla:
1.Näppäile puhelinnumero. Voit tarvittaessa poistaa viimeksi näppäilemäsi numeron poistonäppäimellä . Nosta luuri tai paina kaiutinnäppäintä . Puhelin valitsee numeron 3 sekunnin kuluttua.
2.Nosta luuri tai paina kaiutinnäppäintä . Näppäile puhelinnumero.

Huom! *Näytön alarivillä näkyy puhelun pituus [h:mm:ss].*

5.1 Valinnan toisto

Deskmaster 142 tallentaa 5 viimeksi valittua puhelinnumeroa ja niille puheluiden pituuden sekä kellonajan ja päivämäärän. Numeroita selataan uudelleenvalintanäppäimellä /P.
On kaksi tapaa soittaa uudelleen näytössä näkyvään numeroon:
1.Paina soittonäppäintä . Puhelin valitsee numeron automaattisesti ja kytkee kaiutinpuhelutoiminnon (handsfree).
2. Nosta luuri tai paina kaiutinnäppäintä . Puhelin valitsee numeron 3 sekunnin kuluttua.

Huom.: *Uudelleenvalintanäppäimellä /P on toinenkin toiminto: sillä asetetaan tauko puhelin-numeroon. Puhelinnumerossa näkyy P-kirjain asetetun tauon kohdalla.*

5.2 Mikrofonin mykistys

Mikrofoni mykistetään painamalla kerran poisto- ja mykistysnäppäintä . Mykistyksen aikana toinen osapuoli ei kuule keskusteluasi läsnä olevan henkilön kanssa. Näytössä näkyy sana VAIMENNUS.Mykistys poistetaan painamalla poisto- ja mykistysnäppäintä uudelleen.

5.3 Soittoäänen voimakkuus

Puhelin hälyttää puhelun tullessa. Hälytysäänen säädin on puhelimen takana (voimakas - hiljainen - ei soittoääntä).

5.4 Katkosnäppäin

Katkosnäppäintä (R) tarvitaan joitakin teleoperaattorin tarjoamia palveluja käytettäessä (esim. koputus) tai siirrettäessä puhelua vaihteen alaliittymässä.

5.5 Kuuloke toiminnot(valinnainen)

Jos laitteen takaosassa on kuulokeliitäntä ja kytkin, voit sen avulla määritellä käytätkö kuuloketta vai handsfree toiminnetta.
- Käyttäessäsi kuulokkeita, kytke ne kuulokeliitäntään ja aseta kytkin ON-asentoon . Paina Handsfree nappia soittaaksesi puhelun.
- Käyttäessäsi handsfree toimintoa, aseta kytkin ON-asentoon . Paina Handsfree nappia soittaaksesi puhelun.

6 SOITTAJAN NUMERONÄYTTÖ

6.1 Yleistä

Jos olet tilannut numeronäyttöpalvelun teleoperaattorilta, soittajan numero näkyy puhelimen näytössä. Jotkut operaattorit näyttävät myös soittajan nimen. Vaikka näyttöpalvelu ei näyttäisikään nimeä, nimi näkyy näytössä siinä tapauksessa, että kyseinen puhelinnumero on tallennettu puhelinmuistioon tai lyhyt- tai pikavalintamuistiin.

Puhelun tullessa näyttö voi myös olla jompikumpi seuraavista:

NUMERO TUNTEMATON
Numeronäyttöpalvelu on käytössä, mutta numeron näyttö ei ole mahdollista (esim. ulkomaanpuhelut)

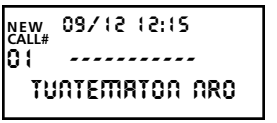

NUMERO ESTETTY
Numeronäyttöpalvelu on käytössä, mutta soittaja on estänyt numeronsa näytön tai numero on salainen.

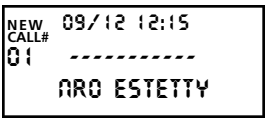

6.2 Numeronäyttömuisti

Deskmaster 142 pystyy tallentamaan vähintään 199 viimeksi tulleen puhelun numeroa ja nimeä. Jos samasta numerosta on soitettu useampia kertoja, näyttö ilmoittaa soittokertojen lukumäärän (enintään 7). Jokaisesta soitosta tallentuu puhelinnumeron lisäksi päivämäärä ja kellonaika.

Lepotilassa olevan puhelimen näytössä näkyy numeronäyttömuistissa olevien soittojen lukumäärä. Esimerkki:

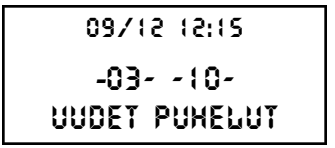

- UUDET 03 - Uusia, tarkastamattomia soittoja on 3 kappaletta.
- PUHELUT 10 - Muistissa on 10 soittoa, joista 3 on uusia ja 7 tarkastettuja.

6.2.1 Numeroluettelon selaaminen

Numeroluetteloa selataan nuolinäppäimillä ▼▲. Luettelon alussa ja lopussa näkyvät sanat ALKU ja LOPPU. Jokaisen uuden soiton ohella näkyy sana NEW. Soiton järjestysnumero näkyy sanan CALL# alla. Viimeksi tulleen puhelun järjestys-nu-mero on luettelon suurin. Vanhin puhelu on numero yksi.

Esimerkki: Numeronäyttömuistissa on 4 puhelua. Kun painat ALAS-näppäintä ▼ näyttöön tulee uusin puhelu. Seuraava ALAS-näppäimen ▼ painallus tuo näyttöön toiseksi uusimman puhelun.

Down button	1st press	2nd press	3rd press	4th press	5th press
CALL#	CALL# 4	CALL# 3	CALL# 2	CALL# 1	
Display	last call	2nd	3rd	Oldest call	TOP/END



6.2.2 Numeroiden poistaminen numeronäyttömuistista

a) Yhden numeron poistaminen

- Etsi poistettava numero nuolinäppäimillä ▼▲.
- Paina poistonäppäintä kerran ⌀. Näyttö kysyy POISTA?
- Paina poistonäppäintä ⌀ uudelleen. Ellet haluakaan poistaa numeroa, jatka selausta nuolinäppäimillä ▼▲.

b) Koko numeronäyttömuistin tyhjentäminen

- Kun puhelin on numeronäyttötilassa, paina poistonäppäintä ⌀ niin kauan, että näyttöön tulee teksti POISTA KAIKKI?
- Vahvista poisto painamalla poistonäppäintä ⌀ uudelleen. Ellet haluakaan tyhjentää muistia, paina jompaakumpaa nuolinäppäintä ▼▲.

Huom! *Voit poistaa kaikki numerot vain siinä tapauksessa, ettei muistissa ole uusia, tarkastamattomia soittoja. Niitä ei ole mahdollista poistaa.*

6.2.3 Puhelun soittaminen numeronäyttömuistista

- Etsi nuolinäppäimillä ▼▲ numero, johon haluat soittaa.
- Paina soittonäppäintä . Puhelin valitsee numeron ja kytkee kaiutinpuhelun. Nosta luuri, jos haluat jatkaa luuripuheluna.

6.3 Ilmoitus puheviestistä

!!! Tämä toiminto on mahdollinen vain, jos teleoperaattori lähettää ilmoituksia puheviesteistä numeronäyttöpalvelun ohella !!!

Kun Deskmaster 142 ottaa vastaan ilmoituksen puheviestistä, sen näyttöön tulee kirjekuorisymboli . Symboli häviää, kun olet kuunnellut viestit.

6.4 Ilmoitus sähköpostiviestistä

!!! Tämä toiminto on mahdollinen vain, jos sähköpostioperaattori ilmoittaa sähköpostiviesteistä soittamalla puhelinnumeroosi !!!

Kun saat uuden sähköpostiviestin, operaattori soittaa puhelimeesi antaen määrätyn numeronäytön. Tästä numerosta tiedät, että olet saanut sähköpostia. Jos tallennat tämän numeron puhelinmuistioon erityisellä nimellä, Deskmaster 142 tietää, että on kysymys sähköpostin ilmoitusnumerosta ja näyttää näytössä sähköpostin symbolin .

SUOMI

- Paina ohjelmointinäppäintä , puhelin on lepotilassa.
- Näppäile puhelinnumero, josta operaattori soittaa ilmoittaen uusista viesteistä.
- Paina ohjelmointinäppäintä uudelleen.
- Paina 0-näppäintä neljä kertaa, jolloin näyttöön tulee '@'.
- Paina ohjelmointinäppäintä Sähköpostista ilmoittavalle numerolle tallentuu puhelinmuistioon nimeksi '@'.

7 PUHELINMUISTIO

Deskmaster 142:n elektroniseen puhelinmuistioon mahtuu 99 nimeä (15-merkkistä) ja puhelinnumeroa (22-numeroista).

7.1. Aakkosnumeerisen näppäimistön käyttö

Kirjaimet asetetaan numeronäppäimillä. Kun esimerkiksi painat numeronäppäintä 5, saat näyttöön ensimmäisen sen alla olevan kirjaimen (J). Seuraavilla painalluksilla saat esiin muut tähän näppäimeen sisältyvät merkit.

Kun haluat asettaa B-kirjaimen, paina kaksi kertaa numeronäppäintä 2. Jos asetat peräkkäin kirjaimet A ja B, näppäile ensin A painamalla 2-näppäintä kerran. Odota sitten 2 sekuntia, että kohdistin ehtii siirtyä seuraavaan asetuskohtaan ja näppäile kirjain B painamalla 2-näppäintä kaksi kertaa.
Jos teet virheen, siirrä kohdistin nuolinäppäimellä väärän merkin kohdalle ja paina poistonäppäintä . Kohdistimen edessä oleva merkki poistuu.

Numeronäppäimiin sisältyvät merkit :

[1] Tyhjä väli . 1 ? !: , " ' ( )
[2] A B C 2 Ä Å À Á Â Æ @ ß Ç
[3] D E F 3 Ë È É Ê
[4] G H I 4 Ğ Ï Ì Í Î İ
[5] J K L 5
[6] M N O 6 Ñ Ö Ò Ó Ô Ø
[7] P Q R S 7 ß $
[8] T U V 8 Ü Ù Ú Û
[9] W X Y Z 9
[0] 0 + - @ & / % $ £
[*] *
[#] #

7.2 Numeron tallentaminen puhelinmuistioon

- Paina ohjelmointinäppäintä, kun puhelin on lepotilassa. Näytössä näkyy TALLENNA NUMERO.
- Näppäile puhelinnumero ja paina ohjelmointinäppäintä.
- Aseta nimi ja vahvista tallennus painamalla ohjelmointinäppäintä.

7.3 Numeron siirtäminen numeronäyttömuistista puhelinmuistioon

- Etsi puhelinnumero soittoluettelosta nuolinäppäimillä ▼▲.
- Paina ohjelmointinäppäintä. Numero näkyy näytössä.
- Muokkaa numeroa tarvittaessa tai vahvista se painamalla ohjelmointinäppäintä. Nimi näkyy näytössä, jos numeronäyttöpalvelu on välittänyt sen.
- Muokkaa nimeä tarvittaessa tai aseta nimi, ellei sitä ole, ja vahvista ohjelmointinäppäimellä . Numero ja nimi on nyt tallennettu puhelinmuistioon.

7.4 Soittaminen puhelinmuistiossa olevaan numeroon nimeä käyttäen

- Paina puhelinmuistionäppäintä.
- Näppäile yksi tai useampia nimen alkukirjaimista.
- Etsintä suoritetaan nuolinäppäimillä ▼▲. Näytössä näkyy ensimmäinen näppäilemälläsi kirjaimella alkava nimi. Ellei yhtään tällä kirjaimella alkavaa nimeä ole muistiossa, näyttöön tulee seuraava aakkosjärjestyksen mukainen nimi.
- Selaa nimiä nuolinäppäimillä ▼▲.
- Kun haluamasi nimi on näytössä, nosta luuri. Puhelin valitsee numeron automaattisesti.

7.5 Puhelinmuistiossa olevan numeron ja nimen muuttaminen

- Etsi puhelinnumero muistiosta edellisessä luvussa olevan ohjeen mukaan.
- Paina ohjelmointinäppäintä. Numero näkyy näytössä.
- Muokkaa numeroa tarvittaessa tai paina ohjelmointinäppäintä. Nimi tulee näyttöön.
- Muokkaa nimeä tarvittaessa tai paina ohjelmointinäppäintä. Muutos on nyt tallennettu puhelinmuistioon.

7.6 Numeron ja nimen poistaminen puhelinmuistiosta

- Etsi numero puhelinmuistiosta luvussa 7.4 olevan ohjeen mukaan
- Paina poistonäppäintä. Näyttö kysyy POISTA?
- Paina poistonäppäintä uudelleen. Jos et halua poistaa numeroa, paina jotain muuta näppäintä.

8 PIKA- JA LYHYTVALINTAMUISTIT

Voit tallentaa 3 pikavalintanumeroa (M1, M2 ja puheposti) ja 10 lyhytvalintanumeroa (0 - 9) puhelimen muistiin (puhelinnumeron enimmäispituus 22 numeroa, nimi 15 merkkiä). Nämä numerot valitaan painamalla M1-, M2- tai VM-näppäintä (yksi näppäin) tai muistinäppäintä + numeronäppäintä 0 - 9 (kaksi näppäintä).
VM-näppäimelle on mahdollista ohjelmoida puhepostin numero. Tämän näppäimen painallus kytkee kaiutinpuhelu-toiminnon ja valitsee automaattisesti puhepostin numeron.

8.1 Puhelinnumeron tallentaminen pika- ja lyhytvalintamuistiin

- Paina ohjelmointinäppäintä, kun puhelin on lepotilassa. Näytössä näkyy TALLENNA NUMERO.
- Näppäile puhelinnumero ja tallenna se ohjelmointinäppäimellä.
- Anna nimi.
- Tallenna numero ja nimi muistipaikkaan:
  Pikavalinta: paina pikavalintanäppäintä M1, M2 tai VM.
  Lyhytvalinta: paina ensin muistinäppäintä ja sitten sitä numeronäppäintä (0 - 9), johon haluat puhelinnumeron tallentaa.

8.2 Puhelinnumeron siirtäminen numeronäyttömuistista pika- tai lyhytvalintamuistiin

- Etsi puhelinnumero soittoluettelosta nuolinäppäimillä.
- Paina ohjelmointinäppäintä. Numero näkyy näytössä.
- Muokkaa numeroa tarvittaessa tai vahvista se painamalla ohjelmointinäppäintä.
  Nimi näkyy näytössä, jos numeronäyttöpalvelu on välittänyt sen.
- Muokkaa nimeä tarvittaessa.
- Tallenna numero muistipaikkaan:
  Pikavalinta: paina pikavalintanäppäintä M1, M2 tai VM.
  Lyhytvalinta: paina ensin muistinäppäintä ja sitten sitä numeronäppäintä (0 - 9), johon haluat puhelinnumeron tallentaa.

8.3 Soittaminen pika- ja lyhytvalintamuistia käyttäen

- Paina pikavalintanäppäintä (M1, M2 tai VM). Lyhytvalintaa varten paina muistinäppäintä ja sen muistipaikan numeroa (0 - 9), johon puhelinnumero on tallennettu.
- Nosta luuri tai paina kaiutinnäppäintä. Puhelin valitsee numeron automaattisesti.

Huom! *Puhepostinäppäimen painallus kytkee automaattisesti kaiutinpuhelun.*

8.4 Numeron tai nimen muuttaminen pika- ja lyhytvalintamuistissa

- Valitse haluamasi numero pika- tai lyhytvalintamuistista.
- Paina ohjelmointinäppäintä. Numero näkyy näytössä.
- Muuta numero tarvittaessa tai paina ohjelmointinäppäintä. Nimi näkyy näytössä.
- Muuta nimi tarvittaessa.
- Tallenna numero muistipaikkaan:
  Pikavalinta: paina pikavalintanäppäintä M1, M2 tai VM.
  Lyhytvalinta: paina ensin muistinäppäintä ja sitten sitä numeronäppäintä (0 - 9), johon haluat puhelinnumeron tallentaa.

Huom! *Puhepostinäppäimeen tallennettua numeroa ei ole mahdollista muuttaa. Sen tilalle voidaan vain asettaa toinen numero.*

8.5 Pika- ja lyhytvalintanumeron poistaminen

a) Pikavalinnat M1, M2 ja VM
Paina ohjelmointinäppäintä ja sen jälkeen pikavalintanäppäintä.
b)Lyhytvalinnat (0 - 9)
Paina ohjelmointinäppäintä , muistinäppäintä ja kyseisen muistipaikan näppäintä 0 - 9.

9 TAKUU

Takuuaika:	1 vuosi puhelimen tekovioille.
Attention:	Palauta laite alkuperäisessä pakkauksessaan. Muista liittää mukaan ostokuitti. Takuu ei ole voimassa ilman ostokuittia.
Maahantuoja:	Oy Hedoy Ab Teleosasto Lauttasaarentie 50 00200 Helsinki www.hedoy.fi

1 Installation 17
2 Buttons/LED 17
3 Display/LED 18
3.1 Standard display information 18
3.2 LED indicators 18
4 Operation 19
4.1 Setting the language of the display text 19
4.2 Setting the Date and Time 19
4.3 Setting the Dial Prefix 19
4.4 Telephone reset 19
5 Making a phone call 20
5.1 Last number redial 20
5.2 Deactivating the microphone (mute) 20
5.3 Ringer volume 20
5.4 Flash Key 20
5.5 Headset operations (optional) 20
6 Caller ID 21
6.1 General information 21
6.2 Call list 21
6.2.1 Scrolling through the Call List 21
6.2.2 Erasing numbers from the Call List 22
6.2.3 Calling a number from the Call List 22
6.3 Voice mail 22
6.4 E-mail notification 22
7 Phone Book 23
7.1 Use of the alphanumerical keypad 23
7.2 Adding a number to the Phone Book 24
7.3 Saving a number from the Call List in the Phone Book 24
7.4 Selecting and calling a number from the Phone Book by name 24
7.5 Changing a number and name from the Phone Book 24
7.6 Erasing a number and name from the Phone Book 24
8 Memory numbers 25
8.1 Programming Direct and Indirect memory numbers 25
8.2 Saving a number from the Call List as a Direct/Indirect Memory number 25
8.3 Calling a Direct/Indirect Memory number 25
8.4 Changing a number or name in the Direct/Indirect Memory 25
8.5 Erasing a number or name from the Direct/Indirect Memory 26
9 WARRANTY 26

1 INSTALLATION

- Connect one end of the line cord to the telephone line wall socket and the other end to the bottom of the phone.
- Put batteries in the battery compartment to activate the display :
  - Open the battery compartment at the bottom of the unit.
  - Insert 4 AA batteries (1,5V)
  - Close the battery compartment.

  Instead of using batteries, you can also use an adapter (DC 9V / 300 mA (⎓)) (adapter not included).

Note: *The memories remain saved, even without batteries or an electricity supply (flash memory) !*

2 BUTTONS/LED

1 Erase/Mute-button
2 'Handsfree' indicator
3 'New Calls' indicator
4 Memory button
5 Direct Memory button 2 M2
6 Direct Memory button 1 M1
7 Flash R
8 Down button ▼
9 Up button ▲
10 Dial back button
11 Set button
12 Redial / Pause button /P
13 Phone Book button
14 Voice Mail button **VM**
15 Handsfree button
16 Alphanumerical buttons
17 Ring volume switch
18 Adapter input
19 Telephone line input
20 Headset connection (optional)
21 Headset/Handsfree selection switch (optional)

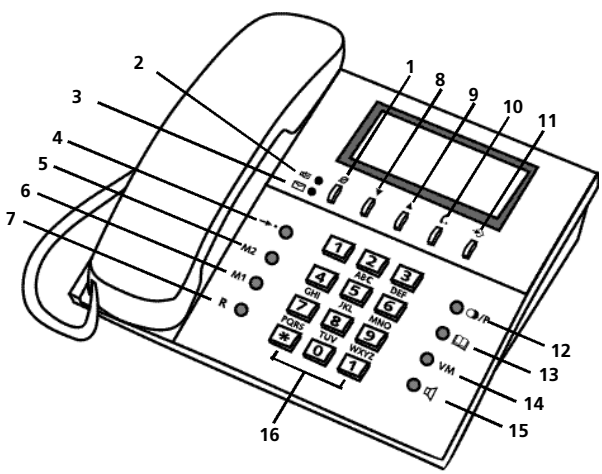

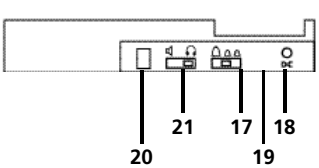

3 DISPLAY/LED

3.1 Standard display information

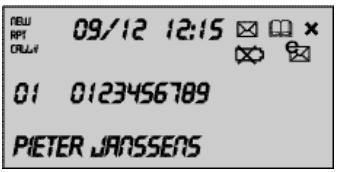

Display information	Description
12:15	Time indication (24h format)
09/12	Date indication (day/month)
	You received new messages in the telephone network mailbox
0123456789	Caller's telephone number
PIETER JANSSENS	Caller's name
NEW	You received a new call
02	The number of the call in the Call list, when shown together with 'CALL#' on the display
	Repeated call counter, when shown together with 'RPT' on the display
	The battery is almost empty
	Phone Book entry indication
	You received an email message

3.2 LED Indicators

LED	Description
	Handsfree or Semi-Handsfree ON
	Blinks once = new call received in the Call list.
	Blinks twice = new voice mail message received.

4 OPERATION

4.1 Setting the language of the display text

You can select the desired language as follows:

- Press and hold the Down button ▼ for 6 seconds until the default language is shown on the display.
- Press the Up and Down buttons ▼▲ to select the language.
- Press the Set button to confirm your setting and to go to the next setting (4.2 Setting the Date and Time) or press the Phone Book button to exit the menu.

4.2 Setting the Date and Time

When you have a subscription to the Caller ID service and your telephone provider sends the date and time together with the telephone number, the phone's clock will be set automatically. It is also possible to set the clock manually:

- After setting the language, you will enter the setting of the Date and Time.
- Enter the day, the month and the time (24h format) by means of the alphanumerical buttons.
- Press the Set button , to confirm and to go the next setting (4.3. Setting the Dial Prefix) or press the Phone Book button to exit the menu.

4.3. Setting the Dial Prefix

When you dial out a telephone number from the call list, the programmed prefix will be added in front of the telephone number. This function is usefull when you have a PABX where you have to dial a prefix to take the external line.

- After setting the date and time, you will enter the setting of the Dial Prefix.
- Enter the desired prefix by means of the numerical buttons (wrongly entered digits can be erased by means of the Erase button).
- Press the Set button to confirm and to go to the next setting (4.4.Telephone reset) or press the Phone Book button to exit the menu.

4.4. Telephone reset

If you want to bring the telephone back in its initial status, it is possible to reset the telephone. When you reset your telephone, all stored information will be lost.

- After setting the Dial Prefix, you will enter the Reset setting.
- Press the Erase button to confirm reset or press the Phone Book button to leave the menu.

Warning : When you reset the unit all memory numbers and Call list numbers will be erased!

5 MAKING A PHONE CALL

There are 2 ways to make a phone call :

1. Enter the telephone number. If needed, you can erase the last digits by pressing the Erase button . Pick up the handset or press the Handsfree button . After 3 seconds, the phone number will be dialled automatically.
2. Pick up the receiver or press the Handsfree button . Enter the telephone number.

Note: *The call duration timer is shown on the 3rd line of the display [h:mm:ss].*

5.1 Last number redial

The Deskmaster 142 saves the 5 last dialled telephone numbers in the memory with indication of the call duration, the date and the time. Press the Redial button R/P to scroll through the Redial memory. When the desired number appears on the display, there are two ways to call back :

1. Press the Call Back button . The unit will take the external line in handsfree mode and the desired number will be dialled automatically.
2. Pick up the receiver or press the Handsfree button . The number will be dialled automatically after 3 seconds.

Note: *The Redial button R/P can be used as a Pause button while entering a telephone number ! The letter 'P' appears on the display on the location where you have added a pause of 3 sec.*

5.2 Deactivating the microphone (mute)

It is possible to deactivate the microphone during a conversation by pressing the Erase/Mute button . You can now talk freely without the caller hearing you. 'MUTE' appears on the display when the microphone is deactivated. Press the Erase/Mute button again if you want to resume your conversation.

5.3 Ringer volume

When you receive a phone call, the unit will ring. The ring volume can be adjusted by means of the Ring Volume switch at the back of the phone (Hi-, Lo-, Off-).

5.4 Flash Key

Press the Flash button (R) to use certain services as 'Call Waiting' (if this service is provided by your telephone company); or to transfer phone calls when you are using a telephone exchange (PABX).

5.5 Headset operations (optional)

If the handset connection and switch are available at the back of the phone, you can choose whether you want to use a headset or the handsfree function.

- When you use a headset, plug it into the headset connection and put the switch on . Press the Handsfree button to make a phone call.
- When you use the handsfree function, put the switch on . Press the Handsfree button to make a phone call.

6 CALLER ID

6.1 General information

When you have a subscription to the Caller ID service from you telephone provider, the caller's phone number will appear on the display. Depending on the telephone network, the caller's name will also be shown on the display. If your telephone company doesn't send the name, but you saved the telephone number with a name in the Phone Book or in the direct/indirect memory, the programmed name will be shown on the display (name tagging function).

During an incoming call, the following information can appear on the display:

NUMBER UNKNOWN
You have a subscription to the Caller ID service but the caller's number is not available (for ex. international calls)

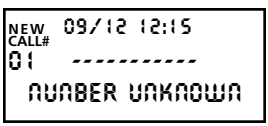

NUMBER BLOCKED
You have a subscription to the Caller ID service but the caller's number is a private number.

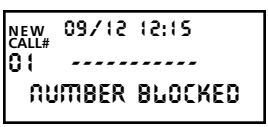

6.2 Call list

The Deskmaster 142 has a Call List in which you can save at least 199 incoming telephone numbers with name. The phone numbers you have received more than once, will also be saved with indication of the repeat call counter (max 7). Every incoming number is saved in the Call List with indication of date and time.

In standby mode the number of new received and total calls is shown on the display, for ex. :

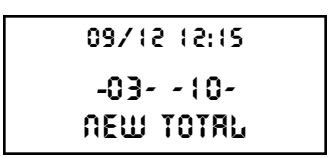

- NEW 03 - You received 3 new calls in the Call List.
- TOTAL 10 - There are 10 calls in total in the Call List: 3 new and 7 old (already checked) calls.

6.2.1 Scrolling through the Call List

You can scroll through the Call list by means of the Up and Down buttons ▼▲.
When you have reached the beginning/end of the list, "TOP/END" appears on the display.
Every time a new call comes in, "NEW" is shown on the display. The number of the incoming call is shown under the indication "CALL#" on the display. The highest number is the last call received. Number 1 is the oldest call.
For example: When you have received 4 calls and you press the Down button ▼, the last call will appear on the display. If you press the Down button ▼ again, the next call will be shown.

Down button	1st press	2nd press	3rd press	4th press	5th press
CALL#	CALL# 4	CALL# 3	CALL# 2	CALL# 1	
Display	last call	2nd	3rd	Oldest call	TOP/END

6.2.2 Erasing numbers from the Call List

a) Erasing one number

- Select the call you wish to erase by means of the Up and Down buttons ▼▲.
- Press the Erase button ⌀ once. "CLEAR?" appears on the display.
- Press the Erase button ⌀ once again to confirm or press the Up or Down button ▼▲ to scroll through the rest of the Call List.

b) Erasing the entire Call List

- Enter the Call List, press and hold the Erase button ⌀ until "CLEAR ALL?" appears on the display.
- Press the Erase button ⌀ once again to confirm or press the Up or Down button ▼▲ to scroll through the rest of the Call List.

Note : *You can only erase the entire Call List if you have no new calls. You have to read the new calls first before they can be erased!*

6.2.3 Calling a number from the Call List

- Select the desired telephone number with the Up or Down button ▼▲.
- Press the Call Back button ✆ and the number will be dialled automatically in handsfree mode. Pick up the handset if you want to communicate over the handset.

6.3 Voice mail

!!! This function only works if your telephone company sends the Voice Mail signals together with the Caller ID information !!!

When the Deskmaster 142 has received a voice mail message, the Voice Mail symbol ✉ appears on the display. As soon as you have listened to the messages in the mailbox, the ✉ symbol disappears.

6.4 E-mail notification

!!! This function only works if your email service provider sends an email warning, by calling your number when there is a new email!!!

When you have received a new email message, your ISP will call your telephone using a special number. This call means you have received new email messages. If you program this number, with a special name, in the Phone Book, the Deskmaster 142 will recognize this number and will show the following symbol on the display: ✉

To set the ISP notification number:
- Press the Set button when the unit is in standby mode.
- Enter the telelphone number from your ISP (the number that will call you when there is an email message).
- Press the Set button again.
- Press the numerical button '0' four times until '@' appears on the display.
- Press the Set button again to save the ISP phone number and the name '@' in the Phone Book.

7 PHONE BOOK

You can store up to 99 names (max. 15 characters) and numbers (max. 22 digits) in the Phone Book of the Deskmaster 142.

7.1. Use of the alphanumerical keypad

Use the alphanumerical keypad to enter text. To select a letter, press the corresponding button. For ex. if you press numerical button '5', the first character (J) will be shown on the display. Press multiple times if you want to select another character under this button.

Press button '2' twice to select the letter 'B'. If you want to select 'A' as well as 'B', press button '2' once to select 'A', wait for 2 seconds until the cursor has moved to the next location and press then button '2' twice to select 'B'.
Wrongly entered characters can be erased by pressing the Erase button . You can move the cursor by pressing the Up and Down buttons . The character in front of the cursor will be erased.

Available Characters
Press these buttons to get the following characters:

[1] Space . 1 ? ! : , " ' ( )
[2] A B C 2 Ä Å À Á Â Æ @ ß Ç
[3] D E F 3 Ë È É Ê
[4] G H I 4 Ğ Ï Ì Í Î İ
[5] J K L 5
[6] M N O 6 Ñ Ö Ò Ó Ô Ø
[7] P Q R S 7 ß $
[8] T U V 8 Ü Ù Ú Û
[9] W X Y Z 9
[0] 0 + - @ & / % $ £
[*] *
[#] #

7.2 Adding a number to the Phone Book

- Press the Set button when the unit is in standby mode. "ENTER NUMBER" appears on the display.
- Enter the desired telephone number and press the Set button.
- Enter the name by means of the alphanumerical keypad and press the Set button to confirm.

7.3 Saving a number from the Call list in the Phone Book

- Select the desired call from the Call list with the Up and Down buttons.
- Press the Set button. The number is shown on the display.
- Modify the number if necessary or press the Set button to confirm. The name is shown on the display (if sent by the Caller-ID).
- Modify or add the name if necessary and press the Set button to confirm. The number and name are saved in the Phone Book.

7.4 Selecting and calling a number from the Phone Book by name

- Press the Phone Book button.
- Enter one or more characters of the desired name by means of the alphanumerical keypad.
- Search for the name in the Phone Book by pressing the Up and Down buttons. The first name that begins with this charachter, appears on the display.When there is no name with this character available, the next name of the alphabetical list will be shown on the display.
- Press the Up and Down buttons to search for a name.
- When the desired name is shown on the display, pick up the handset and the number will be dialled automatically.

7.5 Changing a number and name from the Phone Book

- Select the desired number from the Phone Book by name as mentioned in 7.4.
- Press the Set button. The number is shown on the display.
- Change the number if necessary or press the Set button to confirm. The name appears on the display.
- Change the name if necessary or press the Set button to confirm. The number and name are saved in the Phone Book.

7.6 Erasing a number and name from the Phone Book

- Select the desired number from the Phone Book by name as mentioned in 7.4.
- Press the Erase button. "CLEAR?" appears on the display.
- Press the Erase button again to confirm or another button to exit the menu.

8 MEMORY NUMBERS

You can program 3 Direct (M1-M2 and Voice Mail) and 10 Indirect (0-9) memory numbers (number: max 22 digits, name: max. 15 characters). These memory numbers can be dialled : by pressing M1, M2, or VM (one button) or the Memory button + 0…9 (two buttons). Under the Voice Mail button VM you can program the Voice Mail number. If you press this button, the unit goes to handsfree mode and the Voice Mail number will be dialled automatically.

8.1 Programming Direct and Indirect memory numbers

- Press the Set button in standby mode. "ENTER NUMBER" appears on the display.
- Enter the desired telephone number and press the Set button to confirm.
- Enter the desired name.
- Press the Direct Memory button (M1-M2-VM) to save it in the direct memory; or press the Memory button , followed by the Indirect Memory number (0-9) to save it in the indirect memory.

8.2 Saving a number from the Call List as a Direct/Indirect Memory number

- Select the desired call with the Up or Down button .
- Press the Set button . The number is shown on the display.
- Change the number if necessary or press the Set button to confirm. The name appears on the display if it was sent together with the number.
- Change the name if necessary.
- Press the desired Direct Memory button (M1-M2-VM) if you wish to save the number in the direct memory; or press the Memory button , followed by the Indirect Memory number (0-9) if you prefer to save the number in the indirect memory.

8.3 Calling a Direct /Indirect Memory number

- Press the desired Direct Memory button (M1-M2-VM) or press the Memory button followed by the Indirect Memory number (0-9) to call a number.
- Pick up the handset or press the Handsfree button and the number will be dialled automatically.

Note: *If the Voice Mail button (VM) is pressed, the number will be dialled automatically in handsfree mode.*

8.4 Changing a number or name in the Direct/Indirect Memory

- Select the desired telephone number in the Direct/Indirect Memory.
- Press the Set button . The desired number appears on the display.
- Change the number if necessary or press the Set button to confirm. The name appears on the display.
- Change the name if necessary.
- Press the desired Direct Memory button (M1-M2-VM) if you wish to save the number in the direct memory; or press the Memory button , followed by the Indirect Memory number (0-9) if you prefer to save the number in the indirect memory.

Note: *The Voice Mail button VM can not be changed, only overwritten !! (see 8.1).*

8.5 Erasing a number or name from the Direct/Indirect Memory

a) Erasing a direct memory number (M1-M2-VM)
Press the Set button followed by the desired Memory button M1, M2 or VM.

b)Erasing an indirect memory number (0-9)
Press the Set button followed by the Memory button and corresponding memory number 0-9.

9 WARRANTY

Warranty:	1 year on defects of the phone.
Attention:	Return your phone in the original packaging. Do not forget to include your purchase invoice. The warranty is not valid without the purchase invoice.

TOPCOM®
it's nice t@lking to you
www.topcom.be